


FORD BRONCO

ANTENNA MOUNT

AM-BR01
AM-BR01B


Gen 6 Ford Bronco

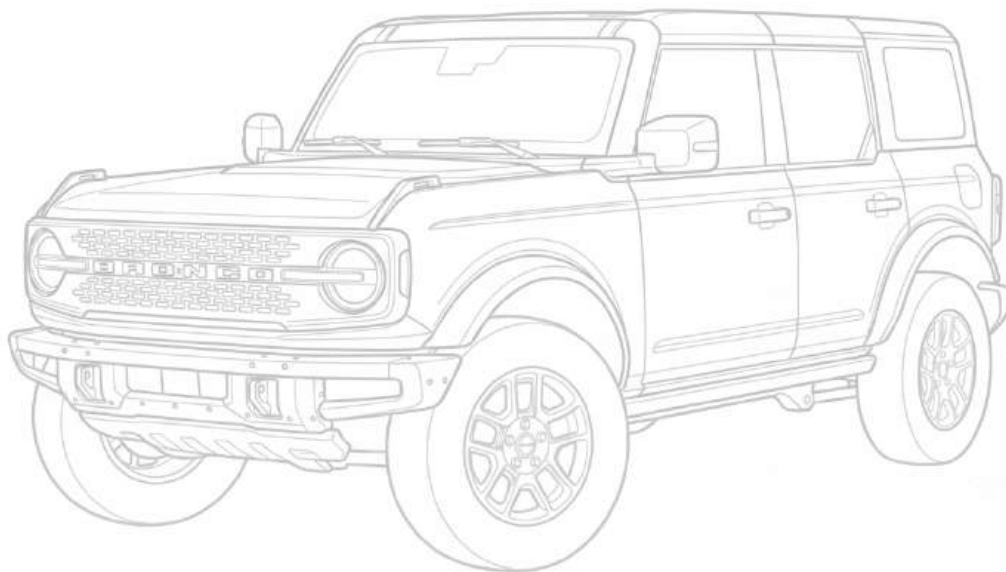

Installation Instructions

What's Included

- Antenna Mount (AM-BR01 / AM-BR01B)

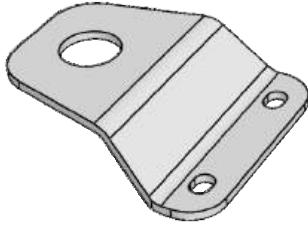



What You Need

- AM-211-14 / -17 Coax. Cable (**Recommended**)
- TP 25 Torx Plus Wrench
- TP 30 Torx Plus Wrench
- Adjustable Crescent Wrench (for NMO installation)

Note: While standard Torx T25 and T30 are often used, they are slightly different and care should be taken to not strip the screw heads.

Mounting Location:

The OPEK Premium AM-BR01 is designed to be easy installation, using the "Accessory Ready" f bolt locations on the Driver or Passenger side re view mirror brackets.

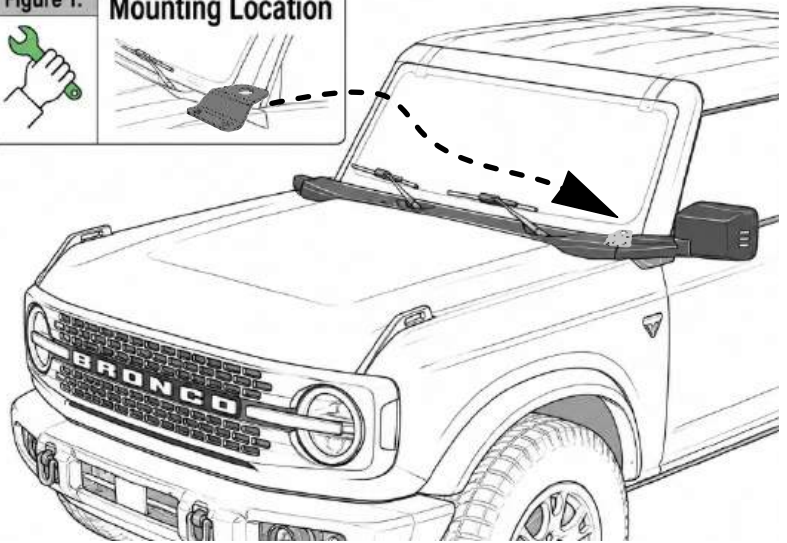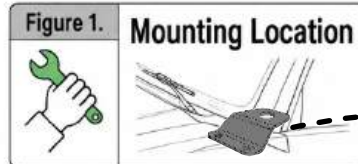

Installation

STEP1: Selecting Side


- A. Select the side that will not interfere with any factory or aftermarket accessories. Be sure to check for windshield wiper clearance (with the wipers on and off).

STEP2: Installing the Mount

- A. After selecting a location, remove the factory Torx Plus screws (note: the two screws use different tools).
B. Place the bracket over the Accessory Ready holes.
C. Hand-thread the two screws.
D. Tighten both screws securely.

STEP3: Install NMO Mount / Cable Assembly

To ensure best performance and longevity, always carefully follow instructions provided by your NMO mount and cable manufacturer.

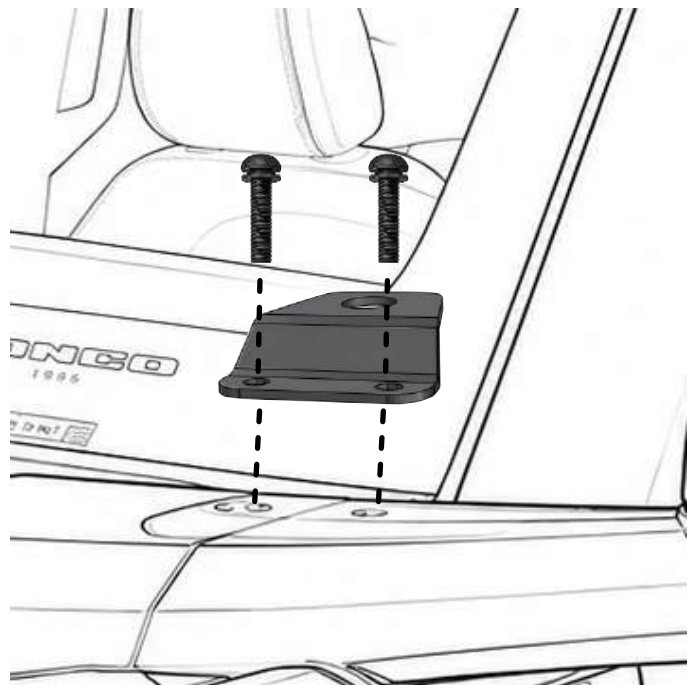

Note:

1. For installations where the cable end of the NMO is exposed to the elements (outside of a vehicle), **OPEK Premium** recommends using crimped / sealed, nickel plated NMO mount / cable assemblies (such as: PN AM-211-14-PL) to avoid performance loss from corrosion.
2. Route coax cables to avoid sharp bends, pinch points, and abrasive surfaces. Do not coil excess cable, as this can cause signal interference or loss.